


Ford Transit R/AWD H2

MOON ORGANIZER

Assembly instructions

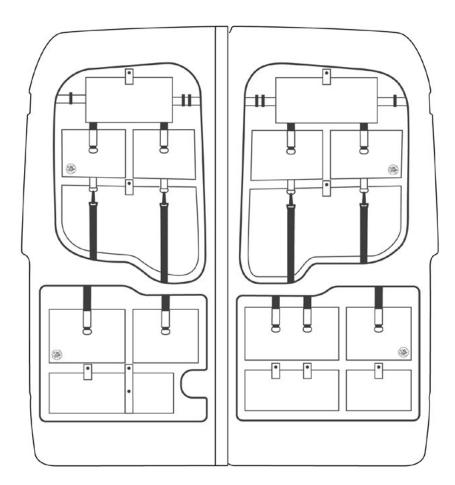

Tools required







Drilling machine

Screw gun


Adhesive tape


Scissors

Assembly of the right bottom organiser

Set of elements



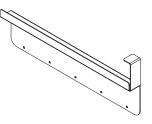

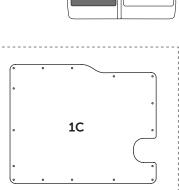


W1A1 – structure element 1x


W1C1 - structure element 1x

Template 1C 1x

- W1A1 is mounted in the lower recess (Fig. 1) so that it is flush with the side of the door (Fig. 2) and flush with the edge of the door (Fig. 3). Mark the screw hole locations. Drill the holes and then screw in W1A1.
- The W1C1 element is mounted below the door handle area. Adjust W1C1 so that it is level with the previously installed W1A1 (Fig. 2). Mark the screw hole locations. Drill holes and then screw in the reinforcement element W1C1.
- 3. Stick template **1C** to the car body and to the ones screwed on earlier (**W1A1** and **W1C1**).
- 4. Mark all mounting hole locations so as to leave a mark on the bodywork and on W1A1 and W1C1. The mounting holes should be of a diameter (4 mm to 6 mm) suitable for screws (not included). Remove the template. Drill the mounting holes with a suitable drill bit.
- 5. Apply the Moon Organizer and screw it to the bodywork and the previously installed components with screws.

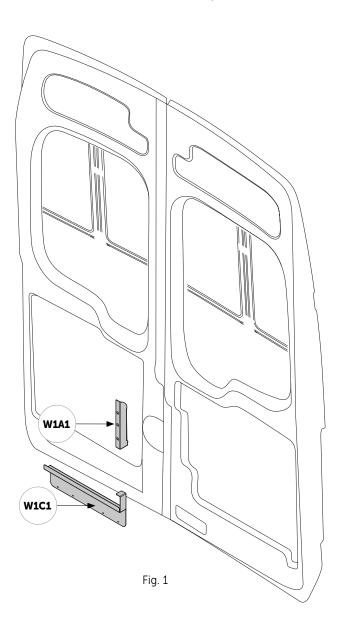




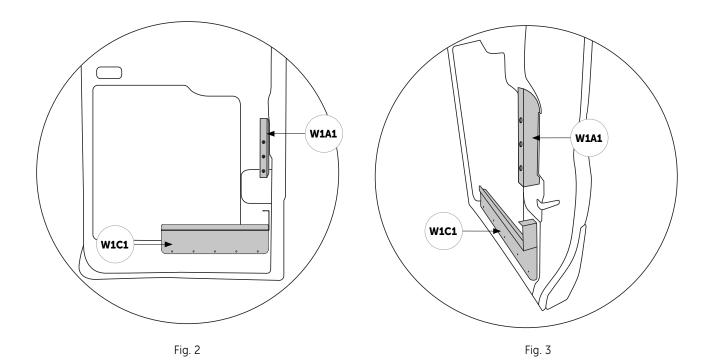


Assembly of the left bottom organiser



Set of elements





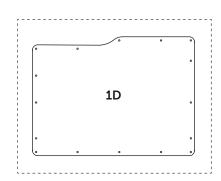






W1D2 – structure element **1**x

Template **1D 1x**


- Position W1D1 so that it is vertically flush with the side of the door (Fig. 4 and Fig. 5) and the matching cut-out covering the embossing (Fig. 6). Fit W1D2 in the door embossing (Fig. 4, Fig.5). Mark the screw hole locations. Drill the holes and then screw in W1D1 and W1D2.
- Stick W1D1, W1D2 and template 1D to the car body.
- Mark all mounting hole locations so as to leave a mark on the bodywork and on W1D1 and W1D2. The mounting holes should be of a diameter (4 mm to 6 mm) suitable for screws (not included). Remove the template. Drill the mounting holes with a suitable drill bit.
- 4. Apply the Moon Organiser and screw it to the bodywork and the previously installed components with screws.

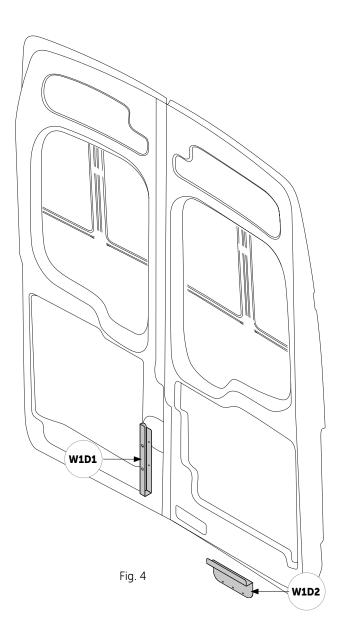

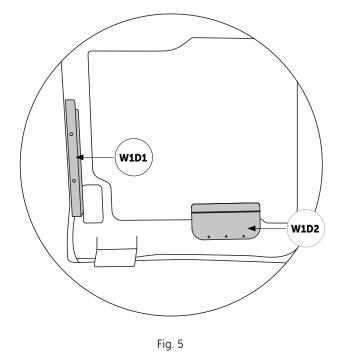

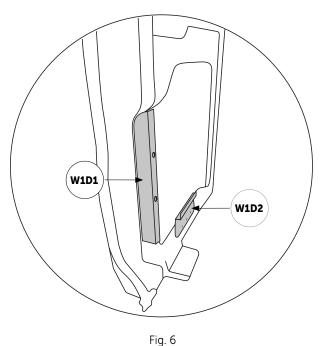

4 | Van Der Moon Moon Organizer Ford Transit R/AWD – Assembly instructions

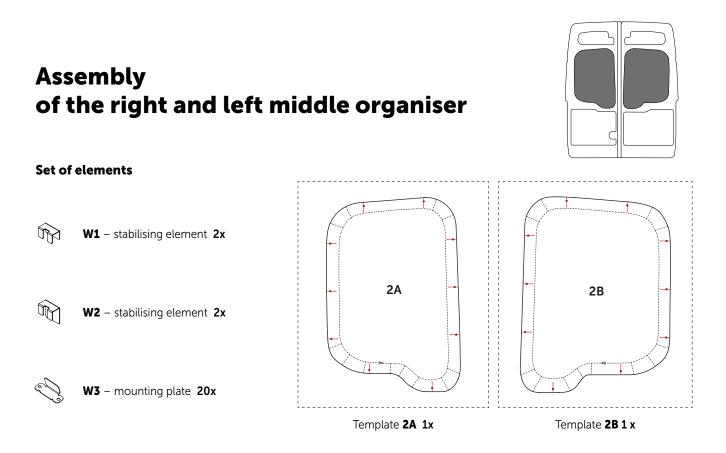

- 1. Cut out the centre of sheet **2A** and/or **2B** and trim the sheet according to the dotted lines. Stick the cut-out template **2A** and/or **2B** to the car body.
- 2. Fold sheet **2A** and/or **2B** to fit the inner cavity.
- 3. The red lines are an extension of where the mounting hole in the Moon Organizer is located.
- 4. Take 1 **W3** mounting plate and position it centrally on the red line of the sheet. Slide mounting plate **W3** up and down (along the red line) to position the mounting plate so that it is flush with the sheet above the recess in the door.
- 5. Mark the locations of the mounting plate holes on the side wall of the door recess.
- 6. Repeat steps **4** to **5** until all mounting locations have been marked.
- 7. Remove the template.
- 8. Drill the mounting holes in **W3** using a special drill bit. Fit mounting plates **W3**. If necessary, the mounting plate should be dogged (or bent) to perfectly match the angle.
- 9. Apply the organiser to the car body and make sure it adheres correctly. Clean and degrease the surface where reinforcements **W1** and **W2** will be stuck to the bodywork. Peel off the mounting tape and stick **W1** and **W2** to the bodywork (Fig. 7 and Fig. 8).
- 10. Drill elements **W1** and **W2**.
- 11. Using the mounting screws, screw the Moon Organizer to the previously installed W1, W2, W3.

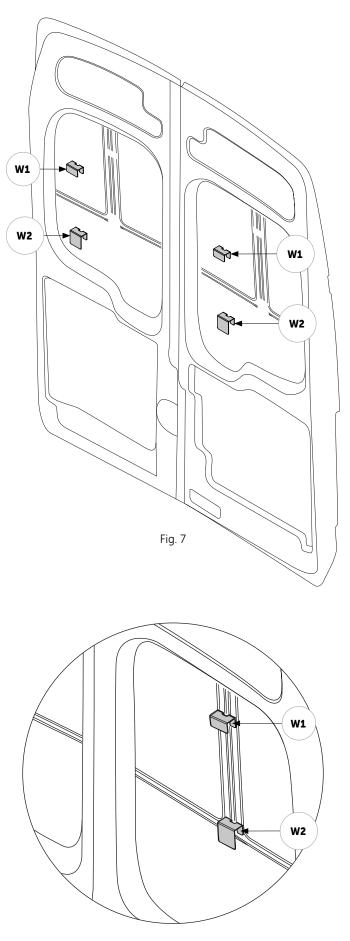


Fig. 8



vandermoon.com

Ver. IM VDM MO FT R/AWD EN 01/11/2022



Manufacturer

Vitberg Sikora Jacek ul. Borelowskiego 29 33-300 Nowy Sącz Poland/EU

Contact phone: 48 18 442 33 69 shop@vandermoon.com

Van Der Moon® is a registered trademark of Vitberg Sikora Jacek © Vitberg Sikora Jacek – all rights reserved. Produced in Poland.

Vitberg

Since 1993, Vittberg has been producing medical devices for rehabilitation, treatment, cosmetology and sport. Its products are well-known and appreciated.

Medicine and technology are not our only passion, we also love to explore the world.

We have transferred the experience we have gathered over the years into producing accessories for people like us. This is how the Van Der Moon brand came into being.